


## Printer Parts

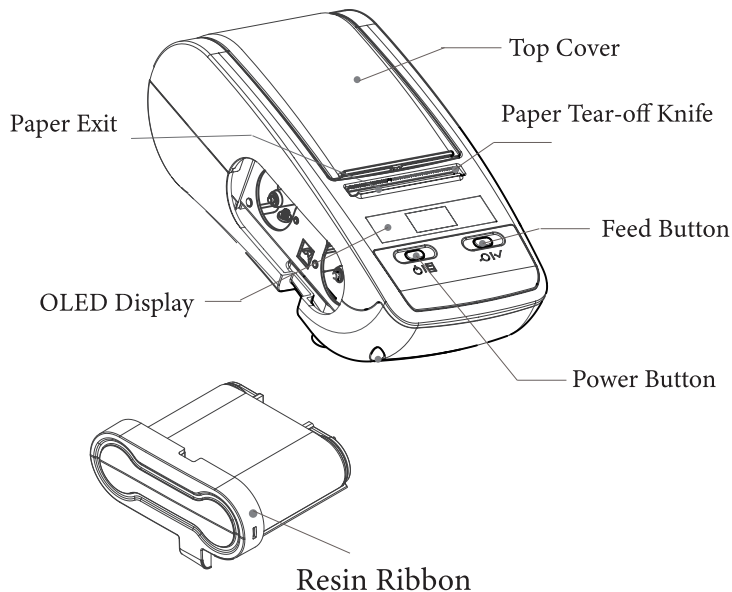

## Basic Operation

### 1. Ribbon Installation

Take out ribbon cassette, avoid touching or creasing ribbon with fingers. Switch the ribbon locking bar (print head locking bar) to unlock position, insert ribbon cassette from the left side of printer to the bottom. Then switch ribbon locking bar to lock position, lock ribbon cassette and print head.

### 2. Power On

Press power button for 1.5s to turn the printer on.

### 3. Paper Roll Installation

Specifications of paper roll: max diameter is 68mm (recommend diameter is 65mm), width 20-54mm, printing side face down.

Place the paper roll into the paper bin; Make paper printing side face down, lead the front end of paper roll into "Paper Import Slot", adjust paper bin to a proper width. Switch ribbon locking bar (print head locking bar) to lock position after paper installed. Press "Feed Button" (slightly push the paper into "Paper Import Slot" by your hand simultaneously), until the paper is installed well.

### 4. Feed Paper

Label paper: short press feed button to feed one label; long press feed button to feed label continuously, release the feed button to stop at the beginning of next label.

Continuous paper: press feed button to start feeding label, release feed button to stop feeding.

### 5. Power Off

The printer will shut down automatically if no use it for a long period. Time of automatic shutdown can be set by setting button, the default time is 15 minutes.

### 6. Set Up Printer

The printer enters setting status when the icon appears on the top left corner of OLED display, short press power button to enter setting system, then press feed button to choose corresponding options.

### 7. Maintenance

Cleaning for platen roller: platen roller must be cleaned regularly, especially when the printing quality declines. Use cotton swab wipe the bold part of platen roller gently with 100% ethanol.

## Connect with Printer


### 1. Install Editing Application

Scan QR Code on the right side, download label editing App WeiDa@Label (Android, iOS)



### 2. Connect with Printer via Bluetooth

Turn on printer-turn on mobile phone Bluetooth-open label editing App, click not connected printer. Then you can edit your label and print it. If the printer hasn't paired before, click search button, then the unpaired printer will be listed. Select unpaired printer, WeiDa will pair with it automatically, enter password and connect with printer.

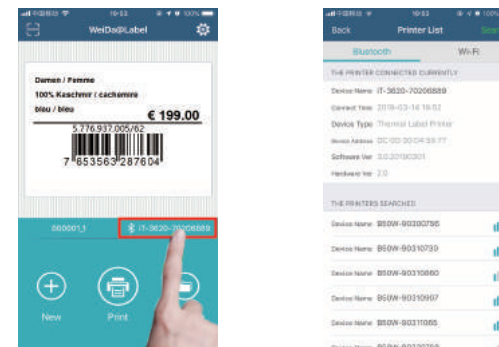

### 3. Use Cloud Catalogue

Please consult your supplier for account password of cloud catalogue. Log in your account to choose template you need from cloud catalogue, click it to use, modify then save the template. In this case, you can choose and print it directly from the cloud catalogue next time.

## Specifications

Display Type	OLED display
Print Method	Thermal transfer line
Print Color	Black and white, Other Colors (depend on ribbon's colors)
Resolution	203 dpi/300 dpi (optional)
Dot per Line	384 dots/line
Print Speed	15 ~ 30 mm/s
Battery Runtime	60~75 m (12.5% print darkness)
Standby Time	About 5 years (power off)
Battery Capacity	2600 mAh
Charge Mode	5V USB
Charge Time	6 ~ 7 h
Power Bank Function	Support
Paper Type	Self-adhesive paper
Paper Form	Roll paper
Paper Size	54 (W) × dia.60 (mm)
Print Width	48 mm
Paper thickness	0.05 ~ 0.15 mm
Dimension	211(L) × 111(W) × 79(H)mm
Dimension	290g
Standard Accessories	Power adaptor, battery, optional ribbon, USB cable
IP standard	IP54
Operating Temperature	0 C ~ 45 C
Interface	Micro USB, Bluetooth (Android, iOS), 2.4G Wi-Fi (optional)
Command Set	LPAPI®, ESC/POS compatible with instruction sets
Location Mode	Reflection-Type
Self-check Function	Cover open, paper out, low battery, overtemperature
Print Contents	<ul style="list-style-type: none"> <li>• Text, picture, line, graphics</li> <li>• 1D Barcode: CODE39, CODE128, EAN, UPC, other commonly used barcodes</li> <li>• 2D Barcode: QR Code, PDF417, DataMatrix</li> </ul>

## Safety Notices


Please compliance with following notices during operation

- ⚠ NOTE Do not disassemble the printer by yourself. Please read this manual carefully before use.
- ⚠ WARNING Turn off the power immediately if a malfunction occurs. When the printer or charger emits smoke or smelliness, please remove the charger and battery immediately, be aware of getting scalded.
- ⚠ WARNING Do not use the printer near petrol station, fuel depot or other inflammables.
- ⚠ NOTE The print head is still heated, do not touch it after the printing process.
- ⚠ NOTE Please choose the original label papers, or poor printing effect and printer platen roller damage can result.
- ⚠ NOTE Please take out the battery and store it separately for long term storage, or it may cause battery failure even the leakage, which may damage the printer.
- ⚠ NOTE Before replacing the battery, please make sure the printer turns off, or power supply is disconnected if you use a charger.

## Portable Thermal Transfer Printer

### Portable Printer

## USER'S MANUAL

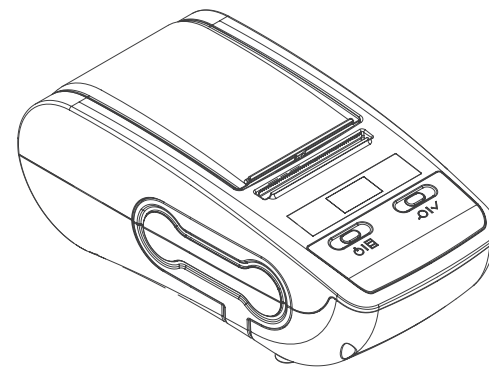

Please read the manual carefully before using, and keep it for future reference